

Extra (Bigscreen 2)

Product page for Bigscreen 2: <https://store.bigscreenvr.com/products/bigscreen-beyond-2>

2x Base stations or more (either version 1.0

(<https://www.vive.com/eu/accessory/base-station/>)

or 2.0 (<https://www.vive.com/eu/accessory/base-station2/>))

Note: Controllers aren't included, so they must be bought separately (Consider buying either Valve Index controllers

(https://store.steampowered.com/app/1059550/Valve_Index_ohjaimet/) or Vive controllers

(<https://www.vive.com/eu/accessory/controller/>)

VR-compatible PC

SteamVR installed on PC (<https://store.steampowered.com/app/250820/SteamVR/>)

1. Place your base stations in **opposite corners** of your playing area.
 - a. Plug your base stations into power outlets and set up their channels to either **A & B** (for two base stations) or **A & C** (If more than two are used)
2. Link the BigScreen 2 headset to the PC with the included fiber-optic cable. The cable consists of one DisplayPort and two USB ports.
3. Install SteamVR on your PC from the Steam store
4. When SteamVR's download is finished, you can start it up.
5. Now you'll be able to connect your controllers to it by holding the **system button** (below the trackpad)
 - a. In SteamVR, navigate to the Devices menu and click on **Pair Controller**, and follow the prompts
6. Run the Room-Scale setup inside SteamVR by navigating into the menu and choosing "**Run Room Setup**". Follow the on-screen instructions and choose the options suitable for your needs.
7. Now the process is complete, and your setup is ready to be used.