

Valve Index

Requirements:

Valve Index Headset (<https://store.steampowered.com/valveindex>)

If you don't own base stations, then I recommend buying the full kit

(<https://store.steampowered.com/sub/354231/>)

VR-Compatible PC (System requirements can be found on Valve Index's store page

SteamVR installed on PC (<https://store.steampowered.com/app/250820/SteamVR/>)

1. Place your base stations in **opposite corners** of your playing area.
 - a. Plug your base stations into power outlets and set up their channels to either **A & B** (for two base stations) or **A & C** (If more than two are used)
2. Connect the Valve Index to your PC by connecting its **Displayport** and **USB 3.0** cables. Plug in the headset's **power adapter** as well.
3. Install SteamVR on your PC from the Steam store
4. When SteamVR's download is finished, you can start it up.
5. Now you'll be able to connect your Index controllers to it by holding the **system button** (below the trackpad)
 - a. In SteamVR, navigate to the Devices menu and click on **Pair Controller**, and follow the prompts
6. Run the Room-Scale setup inside SteamVR by navigating into the menu and choosing "**Run Room Setup**". Follow the on-screen instructions and choose the options suitable for your needs.
7. Now the process is complete, and your setup is ready to be used.